



MEASURING AND INSTALLATION

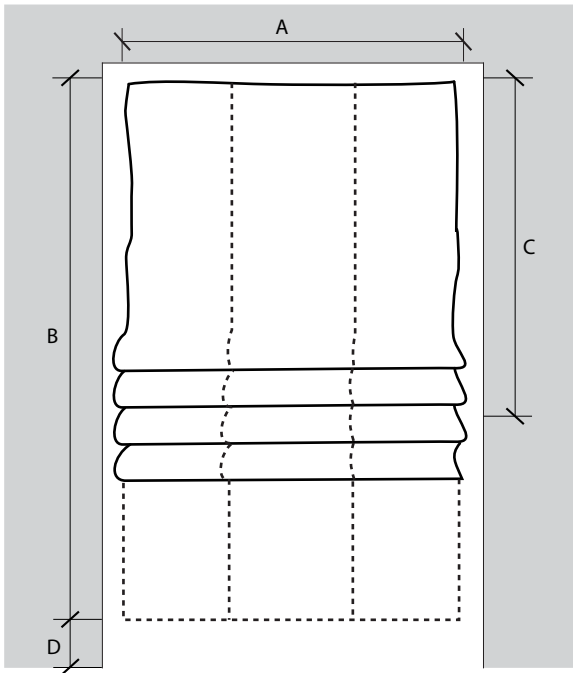

The roman blinds/systems are made to measure. The maximum system widths and heights are specified in the detailed technical sheet.

- A – Width of system: the width of the roman blind system
- B – Height of system: the distance between the top edge of the system and the bottom edge of the fabric (in the fully-extended condition)
- C – Please advise draw side and draw length
- D – Floor clearance

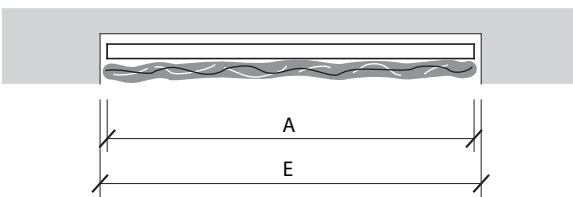

For bay windows or wall-to-wall fittings, please deduct approx. 1 cm from the bay or wall-to-wall measurement.

- E – Width of bay
- A – System width = width of bay minus 1 cm